

### PRODUCT SPECIFICATIONS

Elkay Aqua Sentry Filter System Kit (Coolers + Fountains). Overall dimensions are 2" x 2" x 11-1/2".

<b>Special Features:</b>	Filtered
<b>Dimensions:</b>	2" x 2" x 11-1/2"
<b>Shipping Weight:</b>	1 lbs.
<b>Flow Rate:</b>	0.5 GPM (1.9 L/m)
<b>Capacity:</b>	500 gal. (1893 L)
<b>Temperature:</b>	35-100°F (2-38°C)
<b>Initial Pressure Drop:</b>	2-5 PSI (14-34 kPa)
<b>Maximum Pressure:</b>	100 PSI (689 kPa)
<b>Minimum Pressure:</b>	20 PSI (138 kPa)
<b>Water Inlet:</b>	1/4" (6.4mm) O.D. tube
<b>Water Outlet:</b>	1/4" (6.4mm) O.D. tube

**Special Note:** In-Line filter for use with coolers + fountains - Order 56192C as replacement filter.

- Aqua Sentry retrofit filter kit for unfiltered Elkay coolers and fountains.
- Filter should be replaced every 500 gallons or 6 months after installation.
- Equipped with quick-disconnect fittings on each end of the in-line filter.
- Designed to reduce cysts such as cryptosporidium and giardia, lead, particles and chlorine. Also reduces odors and discoloration from incoming water.
- Filter is tested and certified to NSF 42 and 53 for cyst, lead, atrazine, lindane, Class 1 particulate, chlorine taste and odor reduction.

### KIT INCLUDES

- Filter
- Mounting bracket
- 1/4" polytubing
- 3/8" copper tube
- 1/4" x 3/8" quick connect union
- 1/4" quick connect stem elbow

PART: \_\_\_\_\_ QTY: \_\_\_\_\_

PROJECT: \_\_\_\_\_

CONTACT: \_\_\_\_\_

DATE: \_\_\_\_\_

NOTES: \_\_\_\_\_

APPROVAL: \_\_\_\_\_



**Included with Product:** 500 gal filter cartridge, kit components

A Century of Tradition and Quality. For more than 100 years, Elkay has been making innovative products and providing exceptional customer care. We take pride in offering plumbing products that make life easier, inspire change and leave the world a better place.



**Product Compliance:** NSF 372 (lead free)  
NSF 42  
NSF 53




### INSTALLATION INSTRUCTIONS

The filter must be installed in compliance with all state and local laws and regulations governing the installation and use of this product. Disconnect electrical power and close water supply valve before proceeding. The filter must be installed on the water inlet line. Flow indicator (arrow) on filter should point in the same direction as the water flow. After installing new filter, open water supply valve and check for leaks. Flush system sufficiently (approximately 3 minutes) to effectively remove small residue of carbon fines.

**NOTE:** A water shutoff valve should be installed on the incoming water line to aid in future servicing of filter.

### CAUTION

- Filter is designed to reduce lead from incoming water to levels below EPA requirements. Do not use with water that is microbiologically unsafe or with water of unknown quality without adequate disinfection before or after the system.
- Use on water inlet line only. Do not allow installed filter to freeze. Do not attach hot water line to filter.
- Filter should be replaced every 500 gallons (1,893 liters) or approximately 6 months after installation.

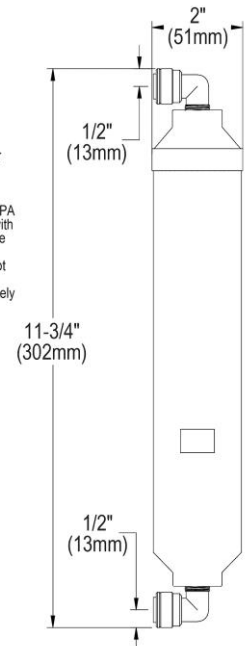

In keeping with our policy of continuing product improvement, Elkay reserves the right to change product specifications without notice. Please visit [elkay.com](http://elkay.com) for the most current version of Elkay product specification sheets. This specification describes an Elkay product with design, quality, and functional benefits to the user. When making a comparison of other producers' offerings, be certain these features are not overlooked.