HydroBoost[®] In-Wall Bottle Filler with Model HTHB-OVL-II™ ER-GRN

OVL Fountain With Bottle Filler

Rated for Indoor Use Only



MODEL: HTHB-OVLERGRN

GENERAL

In-wall, recessed bottle filling station paired with the single OVL-IITMER-GRN refrigerated fountain featuring the high-efficiency SJ8GRN water Chiller.

HYDROBOOST® BOTTLE FILLING STATION

In-wall, recessed design with solid lower panel. Quick fill rate is 1.1 gallons per minute. Includes laminar flow to provide a clean fill with minimal splash and easy maintenance. Equipped with automatic 20-second shut-off timer. User interface design makes touchless operation intuitive. Key plastic components are integrated with silver ion anti-microbial protection to inhibit growth of mold and mildew.

Designed with hinged top and bottom stainless steel panels for easy access and service.

GREEN COUNTER™

Visually displays count of plastic bottles saved from waste. (Based on 20 oz. bottles.)

PANEL

Designed with hinged top and bottom stainless steel panels for easy access and service. Refrigerated model includes louvered panel. Non-refrigerated models includes solid panel.

FOUNTAIN

Oval shape fountain, non-corrosive stainless steel with brushed satin finish and contour-formed basin. Oval fountain shape requires less neck extension and bending for the wheel chair user.

WATER CONSERVATION BUBBLER

Designed to reduce water usage while still providing a satisfying stream. Vandal-resistant SmartFlow™ water-efficient bubbler is one-piece, heavyduty with integral hood guard design.

AUTOMATIC STREAM HEIGHT REGULATOR

Self-closing assembly is located inside unit to prevent tampering. Unit resists corrosion and liming. A constant stream height is automatically maintained under line pressures that vary from 20 to 105 psi.

PUSH BAR ACTUATION MECHANISM

Self-closing, semi-circular push bar can be actuated at any point on it's 180° radius.

MOUNTING FRAME

Manufactured from corrosion resistant, galvanized steel. Open construction designed for ease of installation. Mounting frames can be shipped in advance for rough-in installation.

SUGGESTED SPECIFICATIONS

Provides 8.0 gph of 50°F water at 90°F ambient and 80°F inlet water. Bottle filler shall be recessed design and include electronic sensor activation with 20-second automatic water shut-off. Shall provide 1.1 gpm flow rate with laminar flow to prevent splashing. Shall include anti-microbial protected plastic components to prevent mold and mildew. Shall include visual display of plastic bottles saved from waste. Fountain shall be oval design with self-closing pushbars and contoured basin. Shall include water conservation bubbler with auto stream height regulator. Shall include high-efficiency SJ8GRN water chiller. Shall meet ADA guidelines for visual and motion disabilities, when properly installed. Shall be lead-free design which meets the Safe Drinking Water Act and is certified to NSF/ANSI 61 and 372, UL 399 and CAN/CSA 22.2 No. 120.

Stainless Steel Finish Only

Each HTHB-OVLERGRN is shipped in 5 cartons including:

HYDROBOOST Station with Solid Lower Panel OVL-II-ER-GRN Fountain Mounting Frame (2) Cooling Unit – SJ8GRN

CAPACITIES CHART						c UL us	さ	C USA	GreenSpec® LISTED www.GreenSpec.com
Model	Voltage / Hertz	Chilling** Capacity	F.L. Amps	Rated Watts	Approx. Ship Wt.	UL399 and CAN/CSA 22.2 No. 120 Certified	ADA COMPLIANT	NSF/ANSI 61 and 372 Certified	GreenSpec [®] Listed
HTHB-OVLERGRN	115V / 60Hz	8 GPH	4.0	260	127 lbs.	•	•	•	•

Note: Continued product improvement makes specification subject to change without notice. See Halsey Taylor website for most current spec Sheet.

halseytaylor.com HALSEY TAYLOR, 2222 Camden Court, Oak Brook, IL 60523

HydroBoost® In-Wall Bottle Filler with Model HTHB-OVL-II™ ER-GRN

40" 1016mm



Rated for Indoor Use Only

MOUNTING INSTRUCTIONS:

Refer to diagrams for rough-in of plumbing and electrical sources. The support frame is to be installed first. Hang upper Bottle Filler panel to hanger on frame. Water service lines, waste lines and electrical are assembled as required. The bottom panel is attached last, after a final check for leaks and correct functions of Bottle Filler. (For details see the installation instructions.)

- FRAME

5/16" SCREWS OR BOLTS (10 REQ'D-NOT PROVIDED)

(P/N 111008343890) IN FRAME BEFORE INSTALLING IN OPENING

NOTE: A service stop (not included) must be installed at

NOTE: For wall support required locations see installation

the fountain inlet line. P-Trap (not supplied) to be installed per local

building code.

instructions provided with panel and fountains.

CAUTION - Bottle Filler must be securely bolted to wall.

IMPORTANT: DOUBLE STUD OR 3 INCHES (76 mm) BETWEEN MOUNTING FRAMES IF PLACED NEXT TO ANOTHER BOTTLE FILLER, FOUNTAIN OR WALL WOOD OR STEEL FRAME SHOWN (NOT PROVIDED)

OPERATING PRESSURES:


Supply water - 105 psi maximum

Minimum 40 psi supply line pressure required in special circumstances where both Bubbler and Hydroboost are in use simultaneously to ensure adequate stream height.

ELECTRICAL


Hydroboost® station equipped with electric cord and three-prong molded rubber plug for use with 15-amp minimum receptacle. For the cooling unit, a junction box for a (3) wire, 10 amp branch circuit is provided. Rated at 115 volt, 60 Hz, single phase.


TOP & SIDE VIEWS

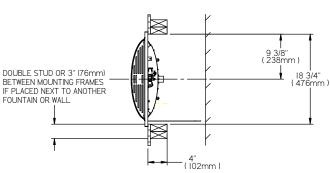

FRONT VIEW

BACK OF WALL TO BE 8" (203mm)

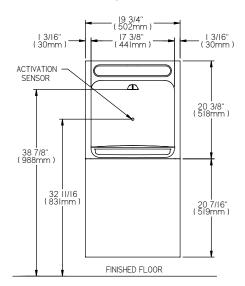

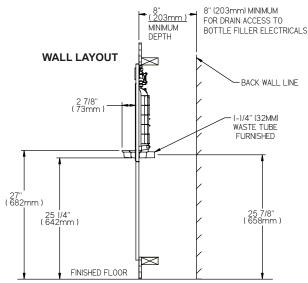

Job Name:							
Date: Qty							
Contact Info (Name, Phone, Email):							
Approval:							

Halsey Taylor

Printed in the U.S.A.

Page 2

HydroBoost® In-Wall Bottle Filler with Model HTHB-OVL-II™ ER-GRN



WALL OPENING

IMPORTANT: It is necessary to create a wall opening 18 3/4" W x 37 3/4" H and 4 1/2" above the floor line.

MOUNTING INSTRUCTIONS


Refer to rough-in for location of plumbing and electrical sources. The support frame is to be installed first. The shelf for the water chiller should be assembled to the wall frame, and then place chiller into position. Hang upper fountain panel to hanger on frame. Fountains are to be attached to panel and wall frame. Water service lines, waste lines and electrical are assembled as required. The bottom panel is attached last, after a final check for leaks and correct functions of fountains and chiller. (For details see the installation instructions.)

service stop not included.

OPERATING PRESSURES:

Installation required trap to be install in wall. Trap and

TOP & SIDE VIEWS Supply water - 105 psi maximum IMPORTANT: DOUBLE STUD OR 3 INCHES (76mm) BETWEEN MOUNTING FRAMES IF PLACED NEXT TO A BOTTLE FILLER UNIT 1 1/8" 29mm WOOD OR STEEL FRAME SHOWN (NOT PROVIDED)

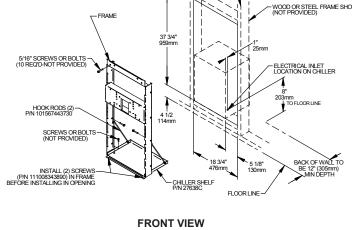

19 3/4" 502mm 20 3/8" 518mm PUSE PUS

20 7/16" 519mm

7" 178mm 686mm **ADA**

ELECTRICAL DATA

Junction box for a (3) wire 10 AMP branch

circuit. Standard 120 volt, 60 Hz, single phase.

В

WALL LINE

FINISHED FLOOR

WALL LAYOUT

9 3/8" 238mm

BACK WALL LINE

2 1/16" 52mm

12" 305mm

5/8" 16mm

MINIMUM DEPTH

28 1/2" 724mm REQUIREMENT D. 8" 203mm 4 1/2" 114mm

1" 25mm

LEGEND:

A = 1/4" O.D. TUBE CONNECT (CHILLER WATER OUTLET)

B = 3/8" O.D. TUBE CONNECT (CHILLER WATER INLET) SHUT OFF VALVE BY OTHERS

C = 1-1/2" WASTE TUBE (ELBOW & TRAP NOT PROVIDED)

D = ELECTRICAL INLET

Halsey Taylor