

ELKAY®

Enhanced

INSTALLATION & USE MANUAL

LZ™ Series Bottle Filling Stations & Coolers



Patent zurn-elkay.com/patents

⚠ **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ **ADVERTENCIA:** Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ **AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

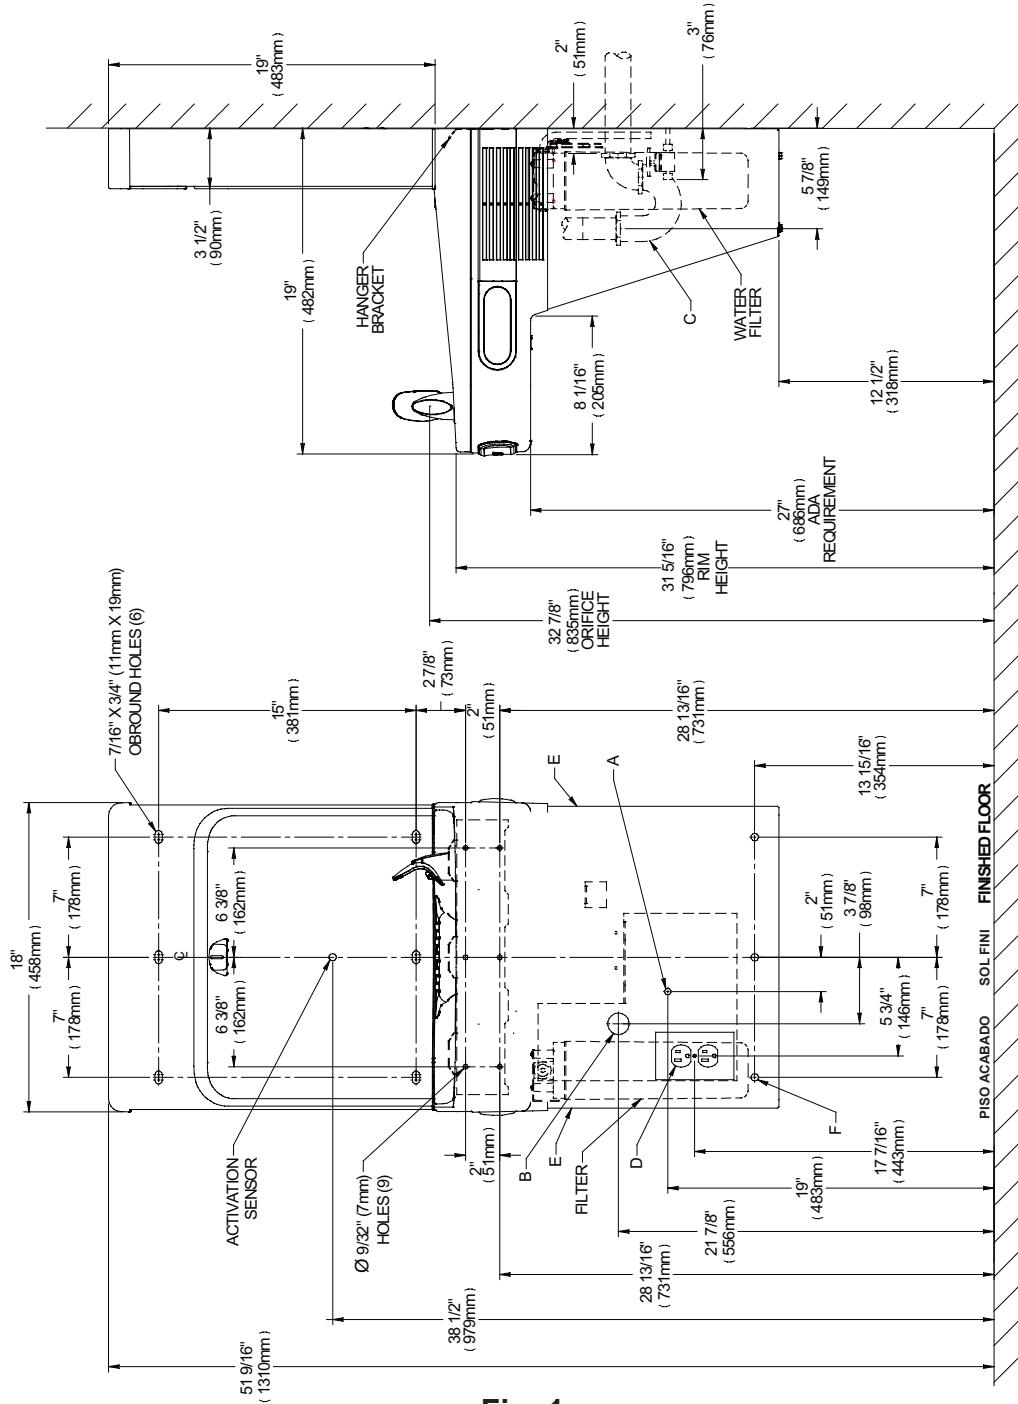







Fig. 1

LEGENDE/LEGEND

A = RECOMMENDED WATER SUPPLY LOCATION 3/8 O.D. UNPLATED COPPER TUBE CONNECT STUB WITH SHUT OFF (BY OTHERS) 3 IN. (76mm) MAXIMUM OUT FROM WALL, MAXIMUM WATER SUPPLY PRESSURE: 105PSI (0.73MPa)
 B = RECOMMENDED LOCATION FOR WASTE OUTLET 1-1/4" O.D. DRAIN STUB 2 IN. OUT FROM WALL
 C = 1-1/4" TRAP NOT FURNISHED
 D = ELECTRICAL SUPPLY (3) WIRE RECESSED BOX DUPLEX OUTLET**
 E = INSURE PROPER VENTILATION BY MAINTAINING 6" (152 mm) (MIN.) CLEARANCE FROM CABINET LOUVERS TO WALL.
 F = 7/16 BOLT HOLES FOR FASTENING UNIT TO WALL

**NEW INSTALLATIONS MUST USE GROUND FAULT CIRCUIT INTERRUPTER (GFCI)
 NOTE: IT IS HIGHLY RECOMMENDED THAT THE CIRCUIT BE DEDICATED AND THE LOAD PROTECTION BE SIZED FOR 20 AMPS.

REDUCE HEIGHT BY 3 INCHES FOR INSTALLATION OF CHILDREN'S ADA COOLER

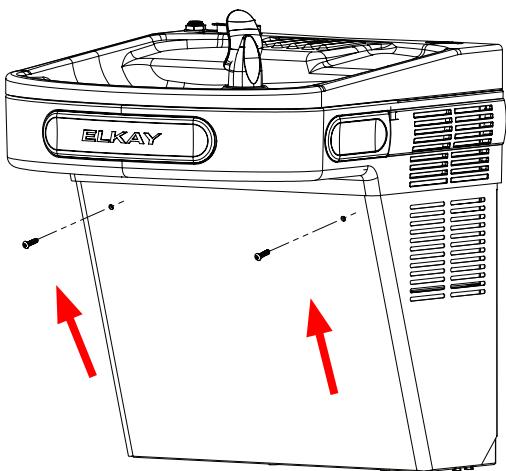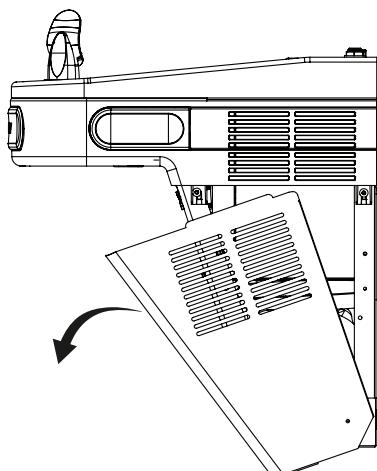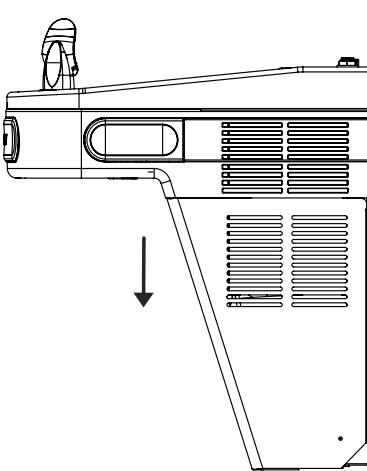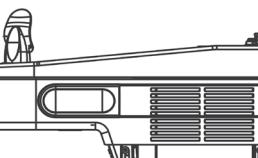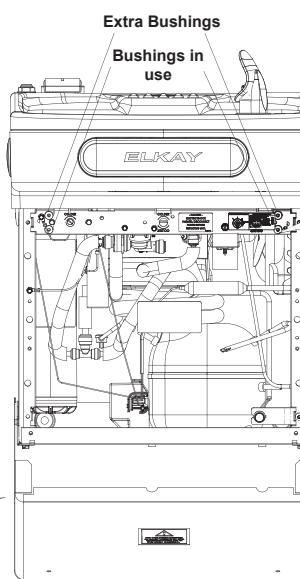INSTRUCTIONS FOR REMOVING WRAPPER**Fig. B(i)****Fig. B(ii)****Fig. B(iv)****Fig. B(v)**

CAUTION: WRAPPER DROPS AND SWINGS WHEN SECURITY SCREWS ARE REMOVED.

CAUTION: DO NOT LEAN ON WRAPPER.

CAUTION: DO NOT USE POWER TOOL TO TIGHTEN. DO NOT OVERTIGHTEN.

NOTE:

1. Ensure that there are no plumbing or external objects below the wrapper in the specified dimension. The specified (3.27") minimum distance is required for the wrapper to swing out (see Fig B(iv)).
2. Removing the wrapper from the pivoting bracket when servicing the unit is recommended. The wrapper may be left in place for quick serviceability (see Fig B(iii)).
3. When re-attaching wrapper, ensure each side of wrapper is engaged to pivoting bracket (see Fig B(v)).
4. Once the wrapper is in place, rotate wrapper up and under the shroud. Ensure thru holes on wrapper are aligned with plastic bushing threads on the frame prior to engaging security screws. Ensure screw is angled relative to the ground and perpendicular to wrapper surface prior to engagement. Hand tighten prior to using hand tool to avoid cross-threading.
5. Four plastic bushings are located in the cross brace of the frame. The lower two bushings align with wrapper holes and the top two bushings are extras in case of replacement (see Fig B(iii)).

HANGER BRACKET INSTALLATION

1) Remove hanger bracket fastened to back of cooler by removing one (1) screw.

2) Mount the hanger bracket as shown in Figure 1 (Pg. 2).

NOTE: Hanger Bracket MUST be supported securely. Add fixture support carrier if wall will not provide adequate support. Anchor hanger securely to wall using all six (6) 1/4 in. dia. mounting holes.

IMPORTANT: 5-7/8 in. (150mm) dimension from wall to centerline of trap must be maintained for proper fit.

INSTALLATION OF COOLER

3) Hang the cooler on the hanger bracket. Be certain hanger bracket is engaged properly in the slots on the cooler back as shown in Figure 1 (Pg. 2).

4) Refer Fig B(i) to B(iv), Pg. 3 for wrapper removing instructions.

5) Secure cooler frame to wall by installing (2) screws and washers (not supplied) in lower holes. (See Fig. 2, Pg. 5). Make sure the screws engage in a structural member.

6) Connect the supply water to the filter inlet tube.

7) Install trap.

IMPORTANT: If it is necessary to cut the drain, loosen the screw at the black rubber boot and remove tube, check for leaks after re-assembly.

BOTTLE FILLER INSTALLATION

8) Remove two (2) mounting screws with 5/32" Allen wrench holding bottle filler to wall mounting plate (See Fig.8, Pg. 6). Note do not discard mounting screws, they will be needed to secure bottle filler to wall mounting plate.

9) Remove wall mounting plate from Bottle Filler (see Fig 8, Pg. 6). Place wall mounting plate against wall on top of basin. Center the wall mounting plate side to side with the basin. Mark the six (6) mounting holes with a pencil. Place tape over wiring harness connection on top of cooler to prevent debris from falling into Connection.

10) Remove wall mounting plate from wall. **NOTE:** Mounting plate **MUST** be supported securely. Add fixture support carrier if wall will not provide adequate support.

11) Install wall mounting plate to wall using six (6) 7/16" obround mounting holes (mounting bolts not included) (See Fig.8, Pg. 6). Use appropriate fasteners for your wall type.

12) Install gasket on bottom of bottle filler tower with gasket support bracket & (2) screws. (See Fig. 4, Pg. 5).

13) Route 3/8" tubing through the opening in the bottle filler gasket and plug into bulkhead fitting in basin. Route the wiring harness through the gasket and plug into the connector on the top of the basin. Water line should be cut to length prior to attaching to bulkhead fitting.

14) Place bottle filler on four (4) hooks on the mounting plate installed on wall. Make sure round boss in gasket fits in hole of basin. (See Fig. 8, Pg. 6).

15) Plug electrical cord into outlet on wall.

16) Remove filter from carton, remove protective cap, attach filter to filter head by firmly inserting into head and rotating filter clockwise. Ensure that front facing label can be read when filter is installed. (See Fig. 11, Pg. 8).

17) Turn water supply on and inspect for leaks in both cooler and bottle filler. Fix all leaks before continuing.

18) Reinstall two mounting screws from first step (See Fig. 8, Pg. 6). Caution, do not over tighten screws.

19) Once power is applied to the cooler the BLUE LED light will illuminate on the bottle filler showing good filter status along with the LCD Bottle Counter.

20) Verify proper dispensing by placing cup, hand, or any opaque object in front of sensor area and verify water dispenses. Note: the first initial dispenses might have air in line which may cause a sputter or hazy appearance of the water. This will be eliminated once all air is purged from the line. Run water and flush filter to purge air and fine carbon particles from filter before use. Visit elkay.com/filtration for additional details.

21) Once unit tests out, install Lower Panel back on water coolers.

22) When re-attaching wrapper, push wrapper up and under the shroud. Make sure wrapper and bushing holes are aligned prior to inserting screw. Units are now ready for use.

Note: Danger! Electrical shock hazard. Disconnect power before servicing unit.

Instructions For Replacing Filters

1) Refer Fig B(i) to B(iv), Pg. 3 for wrapper removing instructions.

2) Turn off water supply; dispense water to relieve pressure.

3) Disconnect electrical power by unplugging unit's power cord.

4) Turn used filter counterclockwise 1/4 turn to remove from filter head.

5) Remove cap from new filter and use to seal used filter.

6) Insert new filter into existing filter head and turn fully clockwise. Make sure you can read the label on the front of the filter once it is installed. (See Fig.11, Pg. 8).

7) Connect electrical power by plugging in unit's power cord.

8) Turn on water supply and flush filter to purge air and fine carbon particles from filter before use. Visit elkay.com/filtration for additional details. Also run water through bottle filler until all air is removed and water flow is clear.

Note: Filter status light will automatically reset once new filter is installed.

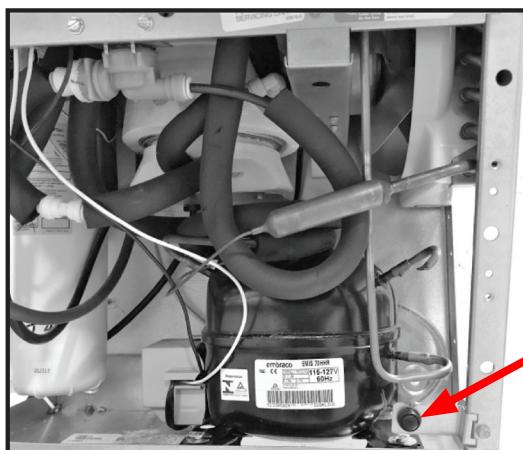


Fig. A

Instructions To Access Programming Button

1) Remove lower cover on refrigerated unit by removing (2) screws (see Fig 7, Pg. 6) and rotating the front panel down, refer Fig B(i) to B(iv), Pg. 3 for wrapper removing instructions.

2) Button is located in lower right corner of unit (See Fig. A, Pg. 4).

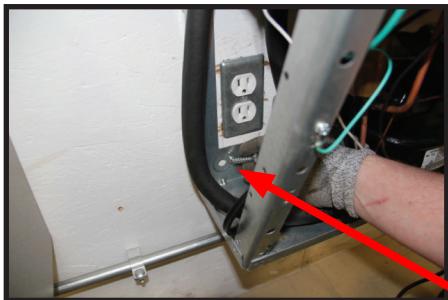


FIG. 2

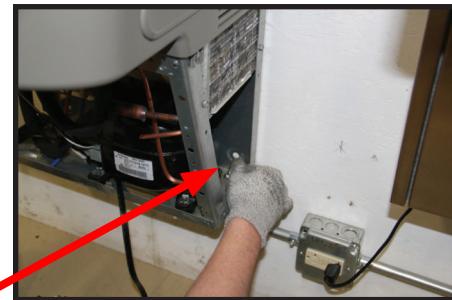


FIG. 3

Secure cooler frame to wall by installing (2) screws and washers (not supplied).

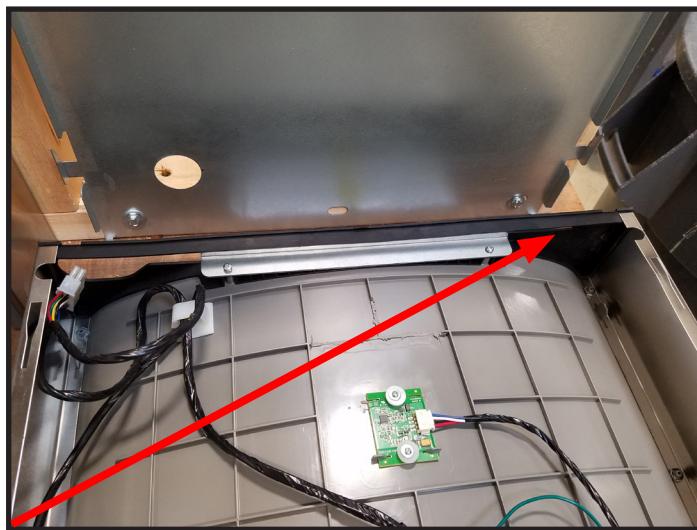


Fig. 4

Lay gasket along back of bottle filler mounting plate. Align BF and lay on cooler basin.

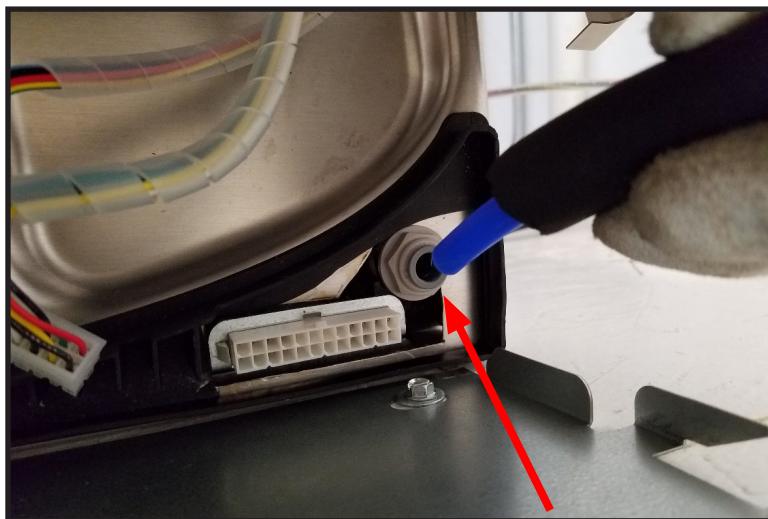


Fig. 5

Attach the 3/8 water line into the bulkhead fitting.
(Gasket removed from bottle filler for clarity)



Fig. 6

Connect the bottle filler electrical harness.
(Gasket removed from bottle filler for clarity)

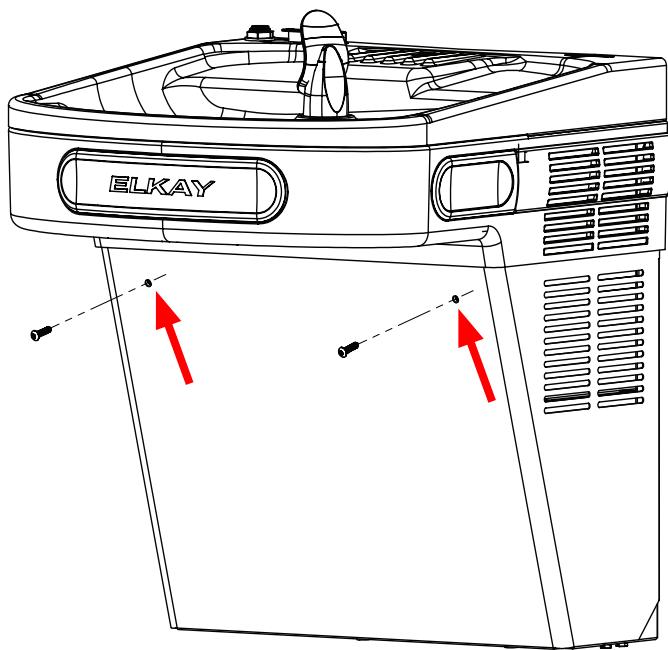


Fig. 7

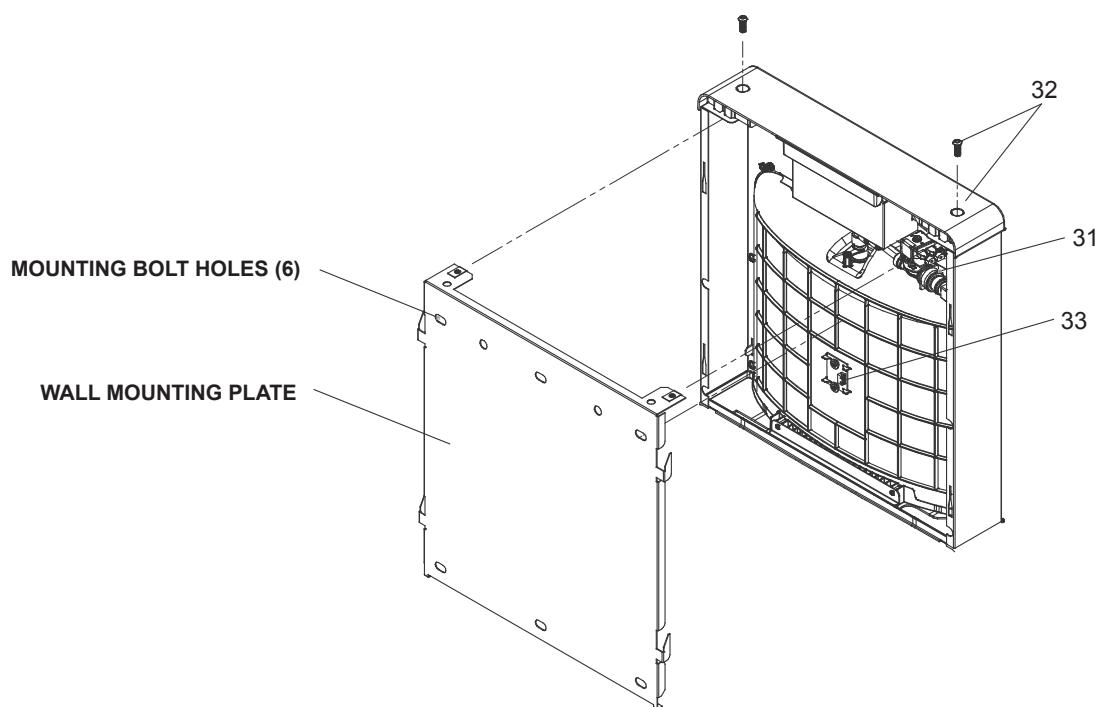


Fig. 8

BOTTLE FILLING UNIT

115V Refrigerated Wiring Diagram with Alpha/Numeric Display

Enhanced Bottle Filling Station Electrical

Diagram


LZS8WSAP

LZS8WSAP-PF

LZS8WSMP

LZS8WSMP-PF

LZS8WSSP-PF

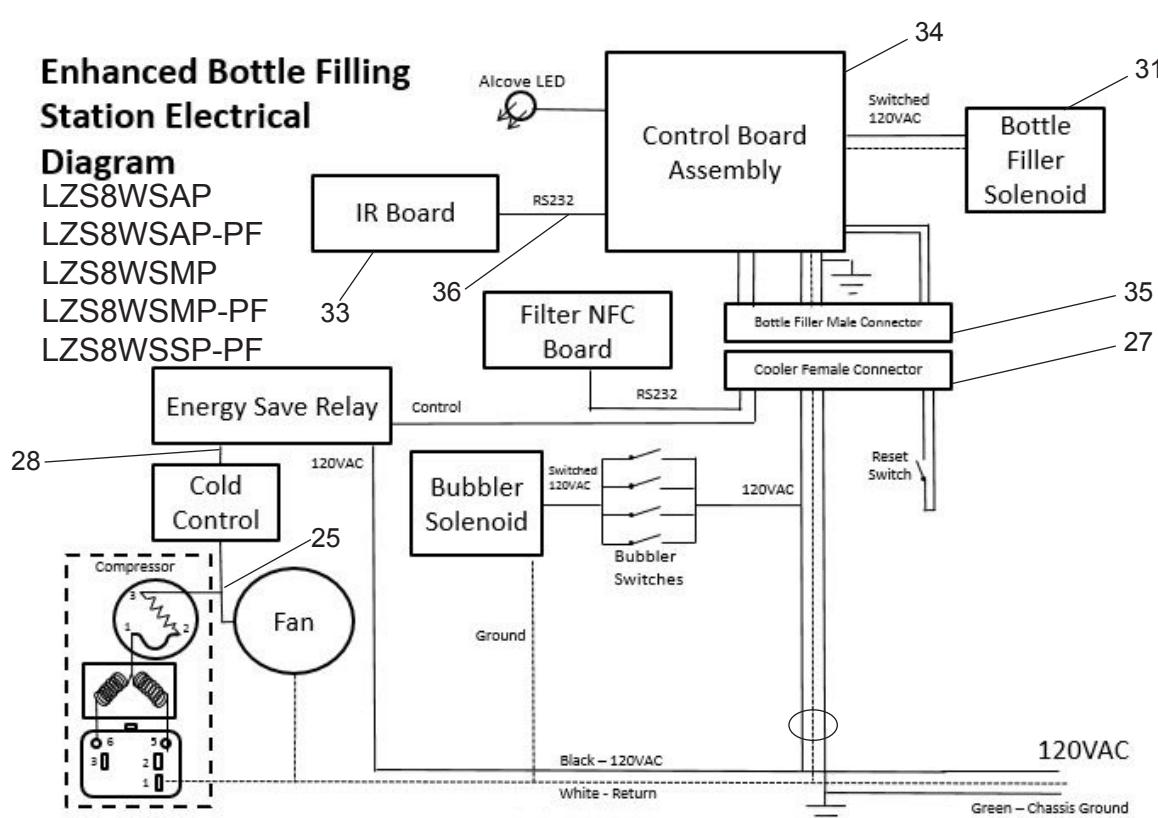
**Fig. 9**

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of CHILDREN
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



OPERATION OF QUICK CONNECT FITTINGS

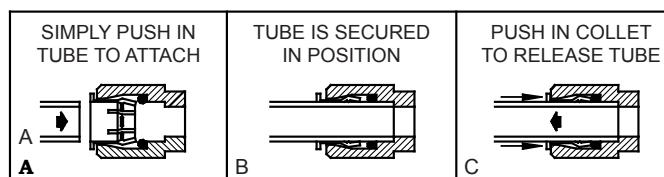**Fig. 10**




Front of Filter



Back of Filter

Fig. 11

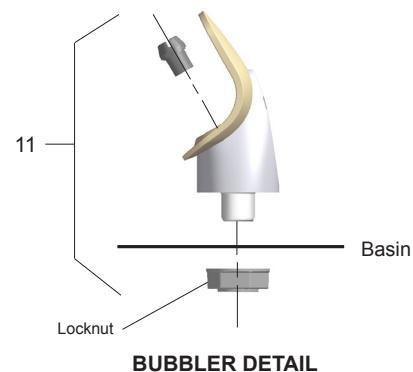

BUBBLER DETAIL

Fig. 12

NOTE:

When installing replacement bubbler and pedestal, tighten nut only to hold parts snug in position. Do Not Overtighten.



Fig. 13

NOTE:

The filter status indicator shows the filter condition using colors. Blue indicates normal operation, no immediate attention needed. Red indicates immediate attention required to maintain proper function.



Scan for trouble shooting and to sign up for auto replenishment of authentic Elkay filters.

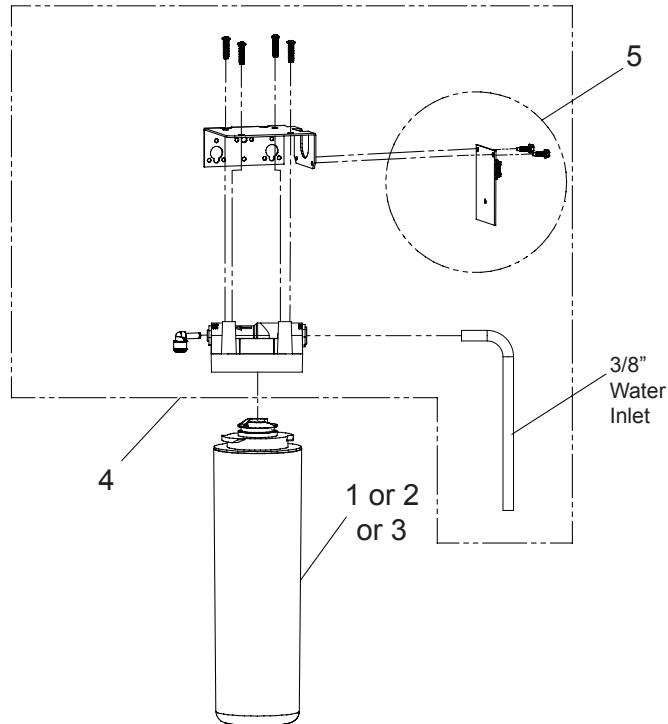


Fig. 14

WATERSENTRY® Filter Detail

| WATERSENTRY® FILTER PARTS LIST | | |
|--------------------------------|------------|--|
| ITEM NO. | PART NO. | DESCRIPTION |
| 1 | 51300C | Filter 3000 Gal (standard) |
| 2 | 51600C | Filter 6000 Gal (high capacity) |
| 3 | 71300C | Filter 2250 Gal (PFOA/PFOS) |
| 4 | 1000005214 | Kit - Filter Head Fittings includes John Guest Fittings & 3/8" Elbow Filter Bracket/Screws |
| 5 | 1000004409 | Kit - NFC Board/Cover |

Note: Danger! Electrical shock hazard. Disconnect power before servicing unit.

Service Instructions

Lower and Upper Shroud

To access the refrigeration system and plumbing connections, Remove two (2) screws from front of cooler to remove the lower shroud. To remove the upper shroud for access to the pushbars, regulator, solenoid valve or other components located in the top of the unit, remove lower shroud, disconnect drain, remove four screws from tabs along lower edge of upper shroud, unplug two wires and water tube.

Bubbler

To remove the bubbler, first disconnect the power supply. The underside of the bubbler can be reached through the access panel on the underside of the upper shroud. Remove the access panel by removing the retaining screw. To remove the bubbler, loosen locknut from the underside of the bubbler and remove the tubing from the quick connect fitting per the Operation Of Quick Connect Fittings section in the General Instructions. After servicing, replace the access panel and retaining screw.

Switches Behind the Push Bar

The regulator in an EZ cooler is always held fully open by the use of a single regulator nut (See Item 9, Fig. 15). Water is not dispensed until the pushbar is depressed to activate a switch which then opens a solenoid valve.

To remove sidebars, from the inside compress the flared tabs and pull out carefully. To reinstall side pushbars, the front of the pushbar is inserted first. While keeping the switch depressed, snap the rear of the pushbar into position.

Cleaning

Stainless Steel

- General cleaning: use an ordinary mild detergent and soft cloth, rinse and towel dry.
- Steel soap pads should never be used; particles can adhere to a stainless steel basin surface and will eventually rust.
- Light scratches are normal for stainless steel basins; over time they will blend into the uniform finish pattern.
- Do not use cleaners containing acids or chlorides, these will cause the stainless steel to oxidize.

Plastic Components

- General cleaning: use an ordinary mild detergent and soft cloth, rinse and towel dry.
- Wiping the surface clean to remove debris or build up will not hurt the antimicrobial properties.

Temperature Control

- Factory set at 50°F (+/- 5°F) under normal conditions. For altitude adjustments, refer to sticker on left side of top bar.

Stream Height Adjustment

VIEW OF UNDERSIDE OF BASIN SHROUD

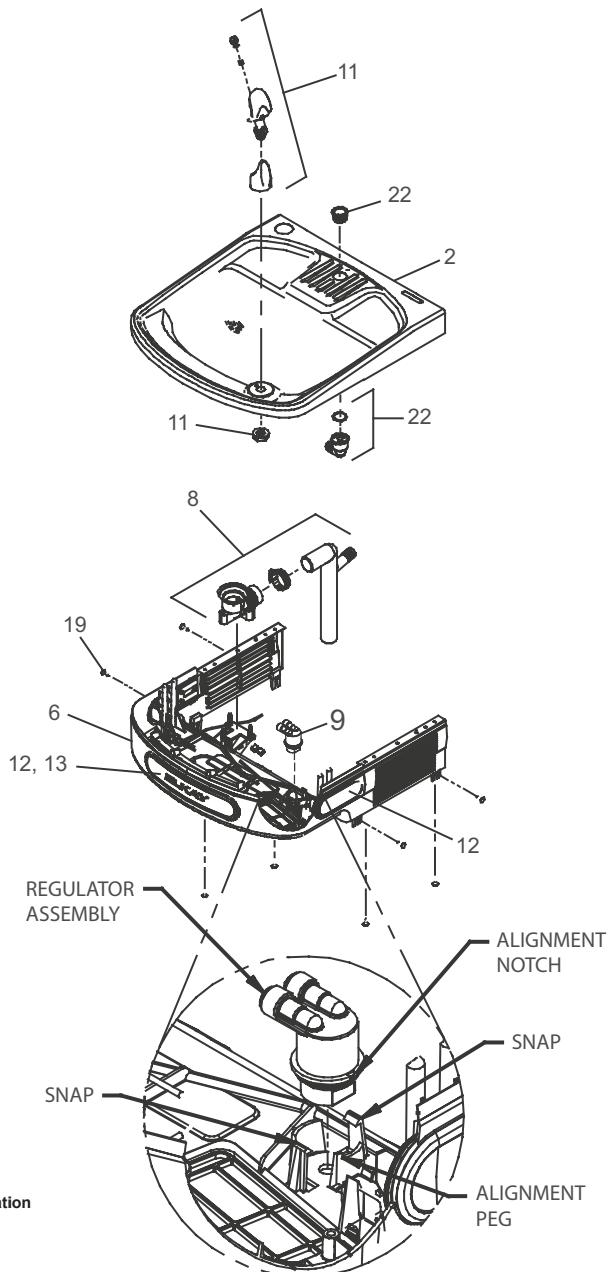
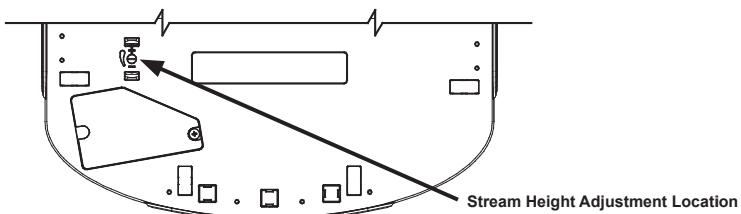


Fig. 15

Programming Instruction

Depress Button for 3 seconds to activate main menu - release

Cycles thru main menu items 2 seconds each for 2 cycles then exits menu unless selected

Cycles thru sub menu items 2 seconds each for 2 cycles then returns to main menu unless selected

Selections are saved when the menu is exited

ENLZS8WSAP_1A, ENLZS8WSAP-PF_1A, ENLZS8WSMP_1A, ENLZS8WSMP-PF_1A, ENLZS8WSSP-PF_1A

| Top level | Action | Sub Menu 1 | Action | Sub Menu/action | Action | Sub Menu/ action | Action | Sub Menu/ action | Notes | End Action |
|-----------|-----------|---------------------------------|-----------|---|----------------|------------------------------|--------|------------------|---|------------|
| Info | Momentary | | | Scrolls through all the settings on unit | | | | | Returns to Main Menu | |
| Info | Momentary | | | Flashes error code | | | | | Returns to Main Menu | |
| Set time | Momentary | | | | | | | | Drops to next level when selected | |
| | | Dow (Sunday-Saturday | Momentary | | | | | | Use push button to select the day on the display | |
| | | AM/PM | Momentary | | | | | | Use push button to select AM or PM | |
| | | Hour (12 hour) | Momentary | | | | | | Use push button to select Hour | |
| | | Min 0-69 in 5 minute increments | Momentary | | | | | | Use push button to select closest minute | |
| Filter | Momentary | | | | | | | | Drops to next level when selected | |
| | No | Momentary | | Turn off filter status and errors | | | | | Returns to Main Menu | |
| | Yes | Momentary | | Default setting - Turn on filter status and errors | | | | | Returns to Main Menu | |
| Refrig | Momentary | | | | | | | | Drops to next level when selected | |
| | No | Momentary | | Disables E/S relay sets bottle fill time to 1.5gpm | | | | | Returns to Main Menu | |
| | Yes | Momentary | | Default setting - Enables E/S relay - sets time to 1.1gpm | | | | | Refrigeration off | |
| Range | Momentary | | | | | | | | Refrigeration on | |
| | 1-10 | Momentary | | | | | | | Returns to Main Menu | |
| B-Light | Momentary | | | | | | | | The lower the number, the closer to the sensor the bottle needs to be to activate | |
| | 25% | Momentary | | | | | | | Drops to next level when selected | |
| | 50% | Momentary | | | | | | | Returns to Main Menu | |
| | 75% | Momentary | | Default Setting | | | | | Refrigeration off | |
| | 100% | Momentary | | | | | | | Returns to Main Menu | |
| EnterSave | Momentary | | | | | | | | Drops to next level when selected | |
| | Off | Momentary | | Default Setting | | | | | Returns to Main Menu | |
| | On | Momentary | | Set Energy Save Schedule | | | | | Drops to next level when selected | |
| | | | | Select Weekday | | | | | Drops to next level when selected | |
| | | | | | Momentary | | | | Drops to next level when selected | |
| | | | | | Select time on | 24 hours - 1-12AM and 1-12PM | | | Drops to next level when selected | |
| | | | | | | | | | Drops to next level when selected | |
| | | | | | | | | | Drops to next level when selected | |
| | | | | | | | | | Drops to next level when selected | |
| | | | | | | | | | Drops to next level when selected | |
| | | | | | | | | | Returns to Main Menu | |

Enhanced EZH2O Error Codes

| Error Code | Error Description | Corrective Action |
|-------------|--------------------------------|---|
| | Bottle filler area obstructed | <ul style="list-style-type: none"> • Remove obstruction. • Clean lens on IR sensor • Unplug unit for at least 30 seconds and restart • If error repeats, replace IR sensor |
| E013 | Missing or Incompatible Filter | <ul style="list-style-type: none"> • Check that filter is installed correctly (label facing forward, white tag facing back) • Unplug unit for at least 30 seconds and restart • Replace filter • Replace filter head assembly with repair kit • If error repeats, contact certified service professional |
| E013 & E014 | Missing NFC Board | <ul style="list-style-type: none"> • Unplug unit for at least 30 seconds and restart • Verify cable connector is plugged into NFC board on filter head assembly • Replace filter head assembly with repair kit • If error repeats, contact certified service professional |

Pictured is unit only without bottle filler.

Note: Danger! Electrical shock hazard. Disconnect power before servicing unit.

Uses HFC-134A refrigerant

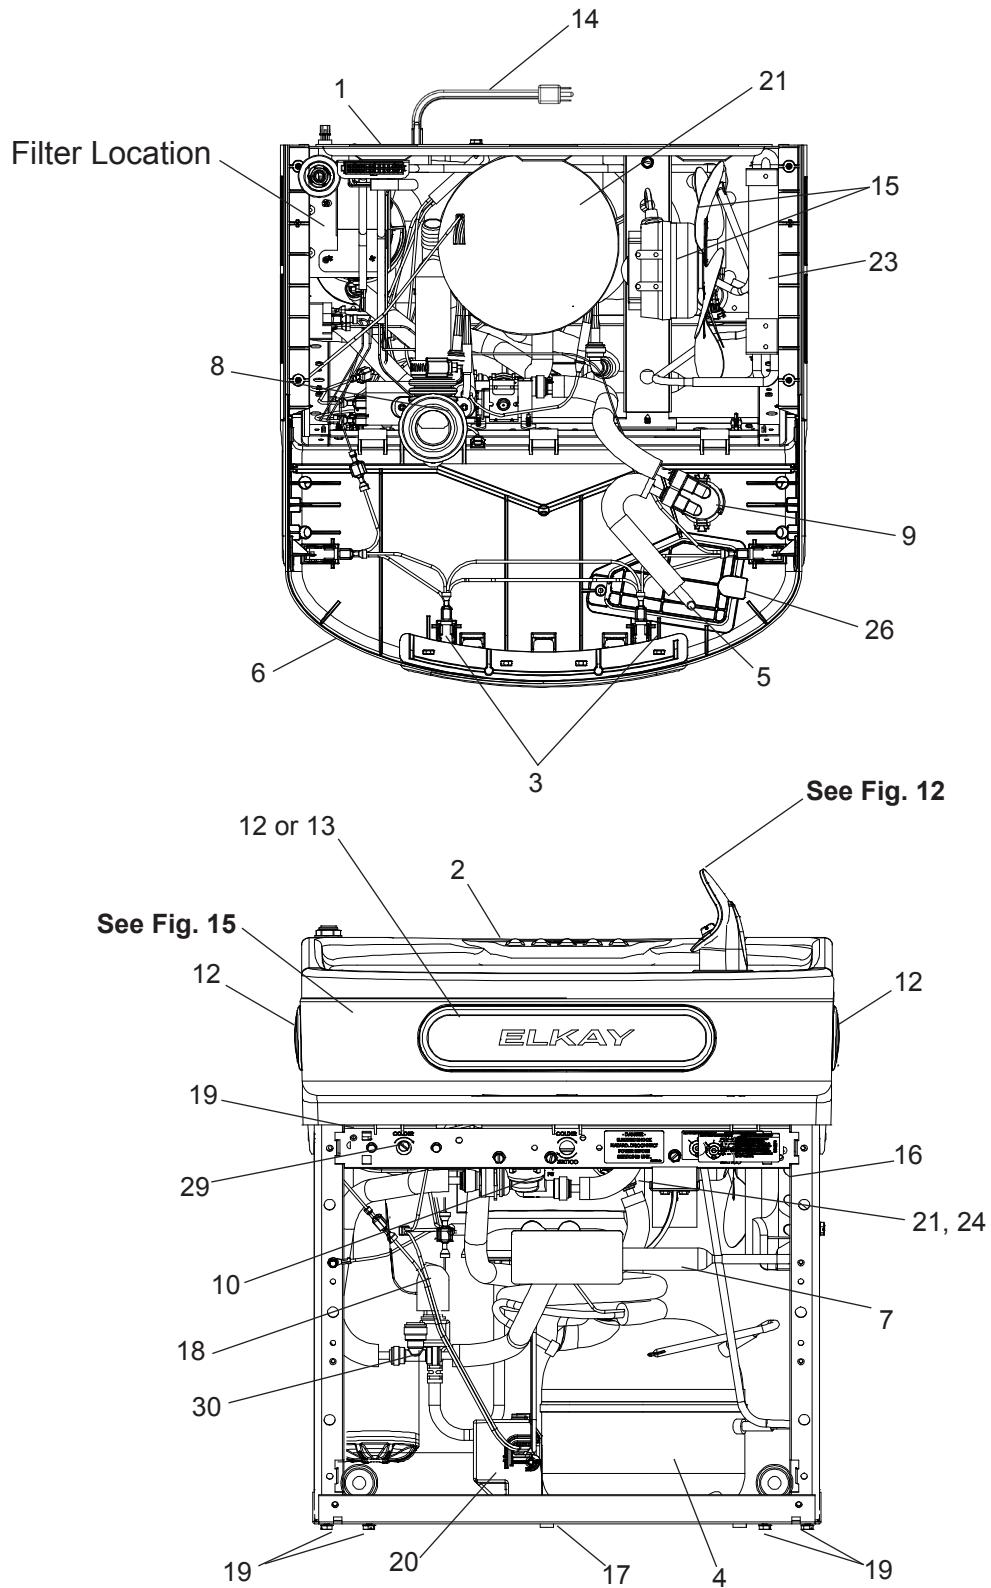


Fig. 16

| 115V PARTS LIST FOR Lzs8wsap, Lzs8wsap-Pf | | | 115V PARTS LIST Lzs8wsmp, Lzs8wsmp-Pf | | |
|---|------------|---|---------------------------------------|------------|---|
| ITEM NO. | PART NO. | DESCRIPTION | ITEM NO. | PART NO. | DESCRIPTION |
| 1 | 28401C | Hanger Bracket | 1 | 28401C | Hanger Bracket |
| 2 | 0000001337 | Basin - Stainless Steel | 2 | 0000001337 | Basin - Stainless Steel |
| 3 | 36216C | Wiring - Front/Side Push Bar | 3 | 36216C | Wiring - Front/Side Push Bar |
| *4 | 36322C | Compr - Service Pak 115V EMIS70HHR | *4 | 36322C | Compr - Service Pak 115V EMIS70HHR |
| 5 | 56092C | Tube - Poly (72") | 5 | 56092C | Tube - Poly (72") |
| 6 | 2000002075 | Assy - Shroud - Upper (Front Side Push) (Arctic White) | 6 | 2000002074 | Assy - Shroud - Upper (Front Side Push) (Midnight Black) |
| 7 | 66703C | Drier | 7 | 66703C | Drier |
| 8 | 1000001877 | Kit - Drain Replacement (Bottle Filler) (Bracket, Tube, Fitting, Clamp) | 8 | 1000001877 | Kit - Drain Replacement (Bottle Filler) (Bracket, Tube, Fitting, Clamp) |
| 9 | 1000004564 | Kit - Regular/Holder/Nut | 9 | 1000004564 | Kit - Regular/Holder/Nut |
| 10 | 1000004572 | Kit - Solenoid Valve/Regulator Assembly | 10 | 1000004572 | Kit - Solenoid Valve/Regulator Assembly |
| 11 | 2000002087 | Kit - Flexi Bubbler/O"-Ring/Nut (Arctic White) | 11 | 2000002086 | Kit - Flexi Bubbler/O"-Ring/Nut (Midnight Black) |
| 12 | 2000002077 | Kit - Pushbar (Front/Side) TL (Arctic White) | 12 | 2000002076 | Kit - Pushbar (Front/Side) TL (Midnight Black) |
| 13 | 2000002079 | Kit - Pushbar (Front Only) (Arctic White) | 13 | 2000002078 | Kit - Pushbar (Front Only) (Midnight Black) |
| 14 | 1000004568 | Power Cord | 14 | 1000004568 | Power Cord |
| 15 | 98775C | Kit - Fan Motor/Blade/Screws/Nut | 15 | 98775C | Kit - Fan Motor/Blade/Screws/Nut |
| 16 | 98776C | Kit - Condenser/Drier/Wire Ties | 16 | 98776C | Kit - Condenser/Drier/Wire Ties |
| 17 | 98777C | Kit - Compr Mtg Hdwe/Grommets/Clips/Studs | 17 | 98777C | Kit - Compr Mtg Hdwe/Grommets/Clips/Studs |
| 18 | 98778C | Kit - Heatbx/Drier | 18 | 98778C | Kit - Heatbx/Drier |
| 19 | 98898C | Kit - Hardware | 19 | 98898C | Kit - Hardware |
| 20 | 0000000238 | Kit - 115V Electricals (Relay, Overload, Cover) | 20 | 0000000238 | Kit - 115V Electricals (Relay, Overload, Cover) |
| 21 | 98724C | Kit - Evap. Replacement | 21 | 98724C | Kit - Evap. Replacement |
| 22 | 1000001812 | Kit - Bottle Filler Drain | 22 | 1000001812 | Kit - Bottle Filler Drain |
| 23 | 56237C | Shroud | 23 | 56237C | Shroud |
| 24 | 1000001602 | Kit - 75583C Elbow 5/16" x 1/4" (3 Pack) | 24 | 1000001602 | Kit - 75583C Elbow 5/16" x 1/4" (3 Pack) |
| 25 | 1000004559 | Wire Assy - Jumper | 25 | 1000004559 | Wire Assy - Jumper |
| 26 | 56213C | Access Panel | 26 | 56213C | Access Panel |
| 27 | 1000004547 | Harness - Cooler | 27 | 1000004547 | Harness - Cooler |
| 28 | 1000004550 | Wire - 6' Jumper | 28 | 1000004550 | Wire - 6' Jumper |
| 29 | 98773C | Kit - Cold Control | 29 | 98773C | Kit - Cold Control |
| NS | 1100000029 | Drop Down Wrapper Replacement Kit (Arctic White) | NS | 1100000028 | Drop Down Wrapper Replacement Kit (Midnight Black) |

NS = Not Shown

NS = Not Shown

| BOTTLE FILLER REPLACEMENT PART KITS FOR Lzs8wsap, Lzs8wsap-Pf | | |
|---|------------|---|
| ITEM NO. | PART NO. | DESCRIPTION |
| NS | 98546C | Kit - Aerator Replacement |
| 30 | 98549C | Kit - Hardware & Waterway (BF) |
| 31 | 1000004573 | Kit - Solenoid 120V (BF) |
| NS | 2000002090 | Nameplate - Elkay Filtered (AW) |
| 32 | 2000002072 | Kit - Top Cover Assy (BF) (AW) |
| 33 | 1000005219 | Kit - IR Sensor K+ |
| 34 | 2000001906 | Kit - Connected Ready LED Board (BBB/R) |
| NS | 1000004436 | Kit - Tower/Basin Gasket |
| 35 | 1000004546 | Harness - Bottle Filler |
| 36 | 1000004549 | Harness - LED/IR Board |

NS = Not Shown

| BOTTLE FILLER REPLACEMENT PART KITS FOR Lzs8wsmp,Lzs8wsmp-Pf | | |
|--|------------|---|
| ITEM NO. | PART NO. | DESCRIPTION |
| NS | 98546C | Kit - Aerator Replacement |
| 30 | 98549C | Kit - Hardware & Waterway (BF) |
| 31 | 1000004573 | Kit - Solenoid 120V (BF) |
| NS | 2000002089 | Nameplate - Elkay Filtered (MB) |
| 32 | 2000002071 | Kit - Top Cover Assy (BF) (MB) |
| 33 | 1000005219 | Kit - IR Sensor K+ |
| 34 | 2000001906 | Kit - Connected Ready LED Board (BBB/R) |
| NS | 1000004436 | Kit - Tower/Basin Gasket |
| 35 | 1000004546 | Harness - Bottle Filler |
| 36 | 1000004549 | Harness - LED/IR Board |

NS = Not Shown

ATTENTION:

If the product serial number is before 190424189, please refer to archived documents section of Elkay.com for the most accurate parts list.
(www.elkay.com/archived-documents)

115V PARTS LIST FOR LZS8WSSP-PF

| ITEM NO. | PART NO. | DESCRIPTION |
|----------|------------|---|
| 1 | 28401C | Hanger Bracket |
| 2 | 0000001337 | Basin - Stainless Steel |
| 3 | 36216C | Wiring - Front/Side Push Bar |
| *4 | 36322C | Compr - Service Pak 115V EMIS70HHR |
| 5 | 56092C | Tube - Poly (72") |
| 6 | 56229C | Assy - Shroud - Upper (Front Side Push) (Standard Gray) |
| 7 | 66703C | Drier |
| 8 | 1000001877 | Kit - Drain Replacement (Bottle Filler) (Bracket, Tube, Fitting, Clamp) |
| 9 | 1000004564 | Kit - Regular/Holder/Nut |
| 10 | 1000004572 | Kit - Solenoid Valve/Regulator Assembly |
| 11 | 56073C | Kit - Flexi Bubbler/"O"-Ring/Nut (Standard Gray) |
| 12 | 98734C | Kit - Pushbar (Front/Side) EZS TL (Standard Gray) |
| 13 | 1000001600 | Kit - Pushbar (Front Only) (Standard Gray) |
| 14 | 1000004568 | Power Cord |
| 15 | 98775C | Kit - Fan Motor/Blade/Screws/Nut |
| 16 | 98776C | Kit - Condenser/Drier/Wire Ties |
| 17 | 98777C | Kit - Compr Mtg Hdwe/Grommets/Clips/Studs |
| 18 | 98778C | Kit - Heatx/Drier |
| 19 | 98898C | Kit - Hardware |
| 20 | 0000000238 | Kit - 115V Electricals (Relay, Overload, Cover) |
| 21 | 98724C | Kit - Evap. Replacement |
| 22 | 1000001812 | Kit - Bottle Filler Drain |
| 23 | 56237C | Shroud |
| 24 | 1000001602 | Kit - 75583C Elbow 5/16" x 1/4" (3 Pack) |
| 25 | 1000004559 | Wire Assy - Jumper |
| 26 | 56213C | Access Panel |
| 27 | 1000004547 | Harness - Cooler |
| 28 | 1000004550 | Wire - 6" Jumper |
| 29 | 98773C | Kit - Cold Control |
| NS | 1100000018 | Drop Down Wrapper Replacement Kit - Stainless Steel |

*INCLUDES RELAY & OVERLOAD. IF
UNDER WARRANTY, REPLACE WITH SAME
COMPRESSOR USED IN ORIGINAL ASSEMBLY.

NOTE: All correspondence pertaining to any of the
above water coolers or orders for repair parts MUST
include Model No. and Serial No. of cooler, name and
part number of replacement part.

NS = Not Shown

**BOTTLE FILLER
REPLACEMENT PART KITS
FOR LZS8WSSP-PF**

| ITEM NO. | PART NO. | DESCRIPTION |
|----------|------------|---|
| NS | 98546C | Kit - Aerator Replacement |
| 30 | 98549C | Kit - Hardware & Waterway (BF) |
| 31 | 1000004573 | Kit - Solenoid 120V (BF) |
| NS | 2000002088 | Nameplate - Elkay Filtered (SG) |
| 32 | 2000002433 | Kit - Top Cover Assy (BF) (SG) |
| 33 | 1000005219 | Kit - IR Sensor K+ |
| 34 | 2000001906 | Kit - Connected Ready LED Board (BBB/R) |
| NS | 1000004436 | Kit - Tower/Basin Gasket |
| 35 | 1000004546 | Harness - Bottle Filler |
| 36 | 1000004549 | Harness - LED/IR Board |

NS = Not Shown

FCC COMPLIANCE STATEMENT

CAUTION: Changes or modifications not expressly approved could void your authority to use this equipment

This device complies with Part 15 of the FCC Rules. Operation to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

INDUSTRY CANADA STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.834.4816

REPAIR SERVICE INFORMATION TOLL FREE NUMBER 1.800.260.6640

PRINTED IN U.S.A.

ELKAY MANUFACTURING COMPANY • 1333 BUTTERFIELD ROAD • DOWNTON GROVE, IL 60515 • 630.574.8484 • www.elkay.com