INSTALLATION INSTRUCTIONS

IMPORTANT:


FLUSH 5 GALLONS OF WATER THROUGH THE FILTER BEFORE USE!


-WF1 FILTER CARTRIDGE INSTALLATION:

WATER FILTER HAS 1500 GALLON CAPACITY, CARTRIDGE WILL REQUIRE REPLACEMENT AFTER 50 HOURS OF ACTUAL OPERATIONAL USAGE. FREQUENCY OF FIXTURE OPERATION WILL DETERMINE TIME FRAME FOR CARTRIDGE REPLACEMENT.

-WF3 FILTER CARTRIDGE INSTALLATION:

WATER FILTER HAS 3000 GALLON CAPACITY, CARTRIDGE WILL REQUIRE REPLACEMENT AFTER 100 HOURS OF ACTUAL OPERATIONAL USAGE. FREQUENCY OF FIXTURE OPERATION WILL DETERMINE TIME FRAME FOR CARTRIDGE REPLACEMENT.

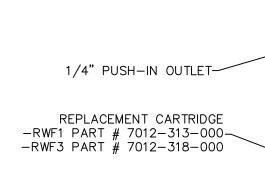

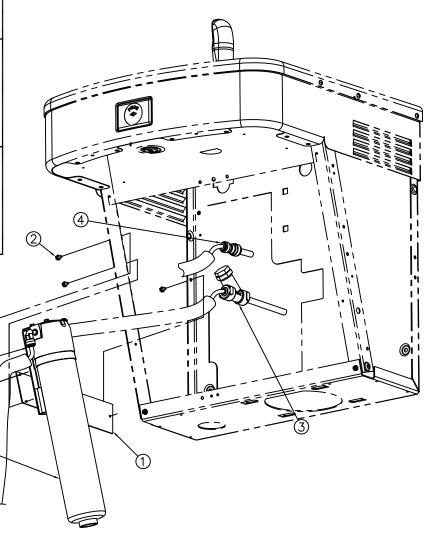

INSTALLATION INSTRUCTIONS:

- A-REMOVE THE BOTTOM HOUSING AND TURN OFF UNIT WATER SUPPLY. IF UNIT IS A REFRIGERATED MODEL, DISCONNECT FROM THE POWER SUPPLY.
- B-PLACE FILTER/BRACKET ASSEMBLY (1) ON INSIDE OF UNIT FRAME AND ALIGN HOLES IN THE BRACKET WITH THE HOLES OF THE UNIT FRAME.
- C-USE THE SCREWS (2) PROVIDED TO PASS THRU THE FRAME CLEARANCE HOLES AND SCREW INTO THE BRACKET HOLES.
- D-FOLLOW PE TUBE FROM "Y" STRAINER 3 OR PUSH-IN UNION 4 TO WHERE IT CONNECTS TO THE EVAPORATOR. DISCONNECT TUBE FROM EVAPORATOR, CONNECT TO FILTER INLET PUSH-IN CONNECTION.
- E-CONNECT NEW PE TUBE PROVIDED WITH FILTER TO EVAPORATOR PUSH-IN INLET, WHERE TUBE WAS REMOVED.

- F-TURN ON WATER. CHECK FOR LEAKS.
- G-IMPORTANT: FLUSH 5 GALLONS OF WATER THRU THE FILTER BEFORE ALLOWING FIXTURE USE.
- H-IF REFRIGERATED UNIT, TURN ON POWER SUPPLY AND CHECK UNIT FOR PROPER OPERATION.
- I- RE-INSTALL BOTTOM HOUSING.

NOTES:

- TO DISCONNECT THE TUBE FROM THE PUSH-IN FITTING PUSH-IN TUBE HOLD DOWN GRIPPER AND PULL TUBE OUT SLOWLY.
- 2- TO CONNECT PUSH-IN FITTINGS, PUSH TUBE IN ALL THE WAY TO MAKE A GOOD CONNECTION. CARTRIDGE REPLACEMENT.



MURDOCK-SUPER SECUR TITLE P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 MUTCO Phone: (800) 591–9880 ww.murdock-supersecur.com

INSTALLATION OF OPTIONAL -WF1 1500 & -WF3 3000 GALLON WATER FILTER

JANUARY 2007 TO PRESENT

MANUFACTURE DATE

DATE ISSUED 06/13/07 DATE REVISED 05/20/22

DRAWING NUMBER

9938-396-001